



Ductworx Installation

Thank you and a Tip of the Hat to Jim Simpson for this incredible Training Piece! We now have an Enhanced Whole-Home Air Purification system in our home that is truly state-of-the "SPACE-AGE" RCI Technology art.

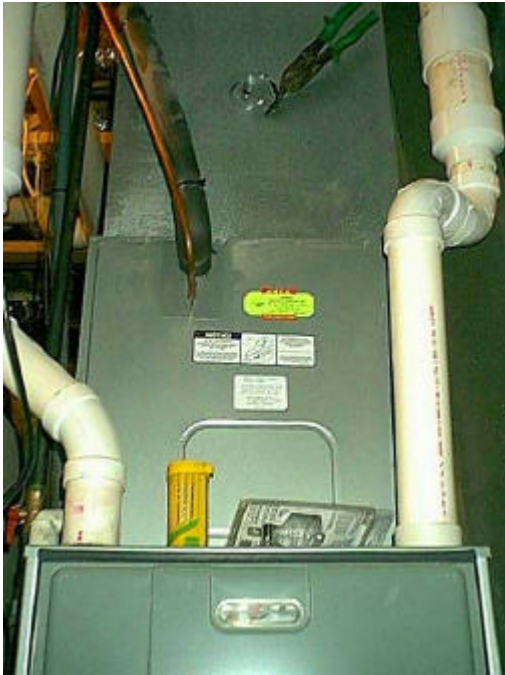

One

First, select a spot, near the exit air source from your furnace. Use the mounting bracket as a template and mark the 3.5" hole and the screw holes with a pencil. Drill a hole in the center then use side cutter tin snips to enlarge the hole. (Another option would be to use a metal cutting hole saw to cut the large hole in the sheet metal ductwork.)

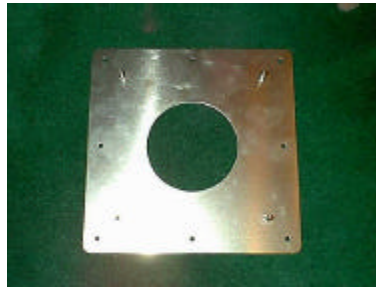


Two

This is the mounting bracket that comes with the unit.



Three

Once the hole is cut in the center, peel the backing off the rubber gasket and stick it in place centering the large hole in the center.

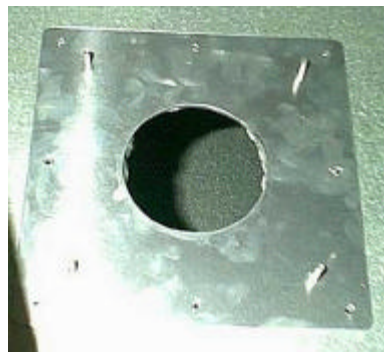

Four

Once the mounting bracket is in place, drill pilot holes for the 8 metal cutting screws used to secure the mounting bracket to the ductwork with a 1/8 metal bit.



Five

Insert the screws and tighten them snugly, do not over-tighten as they can strip the thin sheetmetal.



Six

Install the DuctworX unit, tighten the hex nuts, plug into a 110v outlet and presto! (Note, when you install the unit make sure the air flow is through the honeycomb. It is very easy to reposition once the mounting bracket is in place.



Tools

Here are the tools needed to do the installation. If you are not handy and have these tools I suggest you call your HVAC service company and have them install it. Otherwise, the tools will most likely cost less than a service call)

You can tell that the UV light is working because there is a blue glow from the indicator light on the front of the unit. I made this picture with the lights off so you can see the light. This is not an indicator light, it is produced by a clear plastic light transmitter so if the UV light is on it indicates it immediately as the light for the indicator is actually a small refraction of the actual UV tube.

Installation from start to finish should be approximately one hour. If you have the local HVAC company install your unit, make sure you get an appointment with the owner and show him the technology and sign him/her up as a dealer!